

# **How to Change Printer Settings**

Printer settings are important because they define the final quality of the passport photos. In this How to manual you will learn how to change these settings. This will allow you to optimize the quality of your passport service. Changing the printer settings is a fairly easy 3-step process.

#### Step 1 : Open the current printer settings

Every ID station is shipped with the default printer settings. The settings are stored into a file. To open this file follow these steps:



Click on "Options" and select "System Settings". Now click on "Printer Settings".



Now the "Print Tool" will start, see the picture below. Click "Start Config Tool"

	Print Tool	
	Sinfonia CHC-S6145	Change
	Sinfonia CHC-S6145	
	Printer is online	
	[PaperSize A4 Kind=A4 Height=1169 Width=827]	
	Portrait	
	25 Check again	
	247	
Print watermark		
		Browse

ID station Manual



This will start the Printer Config Tool, showing the window below. Make sure the "Sinfonia CHC-S615" is the current printer. Click on "Load BIN file". A BIN file is a file containing all the printer properties.

→ Ir	nstalled Printers	Sinfonia CHC-S	s6145 V		
	Paper Sizes	custom 🗸		Load BIN File	Save BIN file
Prin	iter Resolutions	Custom	~	ļ	
	Paper Source	Automatically S	Select 🗸		
	Printable Are	a Pa	ge size	Printer Properties	Sinfonia CHC-S6145
Width 779.3333		827		r miter r topentes	
Height	1135.667	1169			
Orienta	ation ndScape rtrait	Horizontal Vertical	300 300		

The default BIN file of your ID station is called **CHC-S6145Settings.bin** and is located in the folder c:\Photomatic7\Config. Open this file

<b></b>	Load Printer Settin	gs File		×
🔄 🍥 🔹 🕆 👢 🕨 This F	PC ► Windows (C:) ► Photomatic7 ► Config	× ۲	Search Config	٩
Organise 👻 New folder			•	0
neDrive	Name	Date modified	Type File fr	
	CHC-S6145Settings bin	12/05/2016 13:52	BIN FI	
Canon EOS 1200C EOS 1200C EOS 1200C EOS 1000 EOS 1000 EOS 1000 EOS 1000000000000000000000000000000000000	P110Settings.bin P510Settings.bin	12/05/2016 13:52 12/05/2016 13:52	BIN Fi BIN Fi No preview availal	ble.
SD SDHC (G:) V <			>	
File name:	CHC-S6145Settings.bin		Devmode Structure File (*.1     Open Cance	3i 🗸

Now click on "Printer Properties".



Now you will see the printer properties, just as Windows would have shown them. Click on the tab "Color".

🖶 Sinfonia CHC-S6145 Properties 🗙	Sinfonia CHC-S6145 Properties
Media Layout Color 😨 About	Media Layout Color (3) About
Media Print Size: CHC-S6145-4x6 in Print Quality: Standard Print Print Finish: Glossy Print Ribbon Type: 4x6 in	Image Color Management ICM Method: ICM Handled by Printer ICM Intent Photo (Perceptual)
Orientation   Portrait  Landscape  Rotate 180°  Mirror  Copies  Copies  Copies  OK Cancel	Color Correction OK Cancel

Click the button "Color Correction".

Now you will see the current (default) color settings of the ID station printer:

	Color Correction			Original	
Settings	d Save	Default			
General					
Brightness:	0 % ' ' ' '	<u>}                                    </u>	-	Preview	
Contrast Saturation: Gamma:	0 % 1 · · · · · · · · · · · · · · · · · ·	<u>}</u>	· · ·		
Sharpness Enable sharp	ness filter (unsharp mask)				
Amount Radius: Threshold:		 			
Color					Remember
Cyan	<u>_</u>	Red 🗌	-2		that these
Magenta		Green	2		
Yellow		Blue	0		settings have
		ОК	Cancel	<u> </u>	been selected after printer a

pictures. Hence these settings are the best average settings. However, they may not be the best settings for you. If not, you can change these settings.



## Step 2 : Change the default settings

Change the printer's output quality by modifying the following set									settir	ngs:		
Genera	al											
	Brightness:	0 %	. <u>L</u>	i.	3	¢)	_`}_	0	a.	- 29	<u></u>	
	Contrast:	0 %	. <u>-</u>	i.	эř.	21		a	r)	a.	<u> </u>	
	Saturation:	-2 %	. <u>'</u>	e.	a	i)	-1-	e.	a.	9	-	
	Gamma:	1.18		- 10-1	<u> </u>	•		- 100	, i	esi s		
-Sharpr	iess											
	🥅 Enable sha	rpness filter	(unsha	arp m	ask)							
	Amount:	120 %				<u>.</u>	а. а	1 1	1000			
	Radius:	2	5-			1	9	3	1	n a	<u></u>	
	Threshold:	1	-`-	a - 1			21	3	1	-		
Color												
	Cyan —						T, F	Red			17	-2
	Magenta —		-1-				- (	Greei	n			2
	Yellow						- E	Blue				0

Brightness, Contrast, Saturation and Gamma are pretty straightforward. If you do not know what these settings stand for please do not change them.

**Note** if you want to make the printer's output brighter: often it is better to increase the Gamma a bit, instead of increasing the brightness.

Sharpness : if you want the printer to print "sharper" pictures (less blurry) then you should switch On the sharpness filter. Below is a suggested setting for the three parameters. Please do not overdo the sharpness, as it will have a bad

effect on the overall print quality!

Suggested settings for more sharpness:

<b>▼</b> E	nable sha	rpness filt	ter (u	Insh	arp i	mas	sk)		
Amo	unt:	104	%	-	i i	i.	<u>ب</u>	ં	×
Radi	us:	2		슈	a.	T.	0	39	
Thre	shold:	1		5	э	æ	R.	a	ð



Finally the color settings <u>Cyan</u>, <u>Magenta and Yellow</u> may be modified to change printer's output colors. Please note that a slight increase or decrease of these values have a huge impact on the prints. So please be careful. Also do not change more than one setting at a time. Otherwise it will be too hard to see the effect of the change to one of the settings.

### How to test the new settings?

Well, first of all you need to make sure that the new settings are in the BIN file! Otherwise your changes will have no effect.

## **Step 3 : Save the new settings**

, and a second sec		-1	
Lo	ad Save	Default	
ieneral			
Brightness:	0 %	<u> </u>	
Contrast.	0 % ' '	<u></u>	-
Saturation:	-2 % ' '	<u> </u>	
Gamma:	1.18	<u> </u>	
harpness			
🔽 Enable sha	rpness filter (unsharp r	nask)	
Amount	104 %	<u> </u>	
Radius:	2 5		
Threshold:	1 5		<u>. )</u>
olor			/
	-1	Bed 0	
Cyan			
Cyan Magenta		Green	1
Cyan — Magenta — Yellow —	ر سر سر	Green Green	- <u>1</u>

So after you have changed one of the printer settings, click on OK. The color correction window will close. (Do not click on Save here!)

Click on OK once more to close the Printer Properties window.

This will bring you back to the Printer Config Tool. Now you can save the new settings into the BIN file. Hence click on "Save BIN file"

			00903	9			
Installed Printers Paper Sizes		Sinfonia CHC-S6145 custom		~			
				$\checkmark$	Load BIN File	Save BIN file	
Prir	iter Resolutions	Custom		~	ļ <u>.</u>		
	Paper Source	Automatically S	Select	~			
Width	Printable Are 779.3333	ea Pa 827	ge size		Printer Properties	Sinfonia CHC-S6145	
Height	1135.667	1169					
Orienta	ation						
	ndScape	Horizontal	300				
La			200				

Please make sure you select the same file as the one you've opened:



8		Save Devmode	File			×
ⓒ ⋺ - ↑ 👢	► This	PC ▶ Windows (C:) ▶ Photomatic7 ▶ Config	<u>ې م</u>	Search Config		٩
Organise • New	/ folder				•	0
🍇 This PC 🔞 Canon EOS 1200E 👠 Desktop	^	Name	Date modified	Type File folder	Size	
	00E	CHC-S6145Settings.bin	12/05/2016 13:52	BIN File		1 KB
Documents Downloads Music Pictures Videos		P510Settings.bin	12/05/2016 13:52	BIN File		1 KB
Windows (C:) RECOVERY (D:)						
SDHC (G:)	~	<				2
File name: Save as type:	CHC-S	6145Settings.bin Ide File (*.Bin)			/	~
lide Folders				Save	Cance	1

Click on save. Windows will show you a warning that this file already exists.....Of course. Click on Yes to confirm.

Now close the Print Tool window and the Config Tool window so that you're back in the ID station software. Click on Print to print the current passport photo with the new printer settings. (You do not have to restart the software nor the printer. That makes fine-tuning the printer settings a lot faster).

You will see the result of your modifications to the printer settings. Please note that you will need to test your new settings with a number of different photos to be sure that the new settings are in fact an improvement.

If you need to fine-tune a bit more, just repeat the steps 1,2 and 3. It's not that hard to do, it just takes some time. Good luck.