

Resetting Canon SLR Camera

Step 1:

- Turn **ON** the camera and switch dial to **P** mode.



Step 2:

- Canon camera main screen should look like this.





Step 3:

- Press the menu button.
- Use the button on the outside of the circle to navigate and use the set button as **OK**.
- Press the menu button and navigate to right on 3rd yellow box and select clear settings.



Step 4:

- In this menu select both options one by one and press **OK**.
- Once settings cleared press Menu button again.





Step 5:

- Now navigate to 1st red box in the left corner and choose **Image** or **Image quality** (depending on the version of camera).
- Change it to **S1** with curve sign and press OK.
- Keep **Red-eye reduction** function on **DISABLED** mode all the time even **With or Without Photo-booth setup**.



Step 6:

- Now navigate to 1st yellow box in menu and choose **Auto power OFF**.
- Select **2 min** option and press OK.



Step 7:

Use this function only when the lighting in the store itself is warm/yellow **else leave it on 0**. As by using this function you can increase or decrease the intensity of camera flash like separate flash unit.

- Choose **Flash control** from the options.
- Then select **Built-in flash function settings**.



- Choose **Flash exp. Comp** option from the menu.
- This will allow you to adjust the intensity of camera flash as moving to right **INCREASE** and moving to left **DECREASE**. Once adjusted choose Set and go back to main screen by pressing Menu button.





Step 8:

- Now press the **ISO** button and select **AUTO** option and press **OK**.



Step 9: Adjusting White Balance

NOTE: If the camera is **Canon 1100D or 1200D** then only **Ambience Priority** option is available which can simply be selected by pressing **WB** button.

But if the camera is **1300D or 1500D**, follow the steps below:

- Press the **WB** button and by default it will be on **AWB-Ambience Priority**.
- Press **DISP** button to change it to **AWBW** and press **OK**.



Step 10: Adjusting the Focus of the camera.

- Always keep the camera on **Auto-Focus mode**.




- Rotate the lens dial and adjust it to **55**. If dial is **glued**, then don't worry.
- Focus the lens on **ceiling or plain white wall** by pressing the shutter button half and lens will start moving back and forth.





- Now focus the camera on the near by object by pressing the shutter button again.
- Once that is done keeping eye on the position press this **Magnifying glass + button**.
- After that you will be able to **9 Red Dots** on the screen.

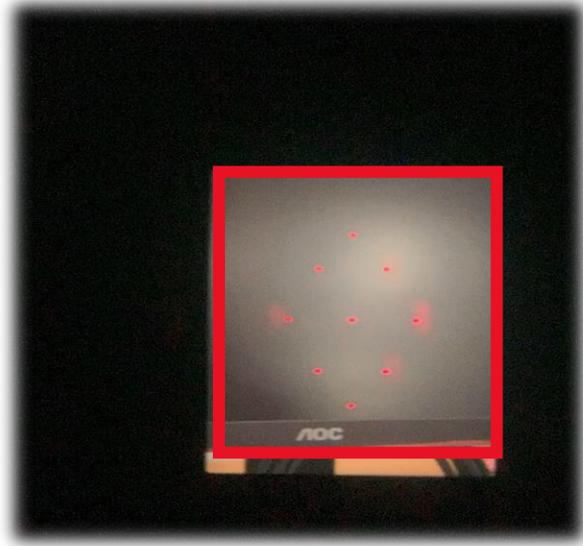

- Now use the dial button next to the shutter button to adjust the focus position for the camera.
- By the dial you can change the dot position, for best result bring the **Red Dot** to the middle.

